


**POWER**— Power on/off the media unit

**NAVIGATION**— Use to navigate UP/DOWN LEFT & RIGHT within menus. Press PLAY/PAUSE to select choice.

**PLAY/PAUSE/SELECT**— Press to play or pause an ON DEMAND Video Stream. (Does not work with live TV streams.) Also used to select choice.

**RETURN/STOP**— Press to go back ONE menu level. Also acts a STOP button to stop current video or Live TV Channel

**HOME**— Press to return to XBMC from any android app

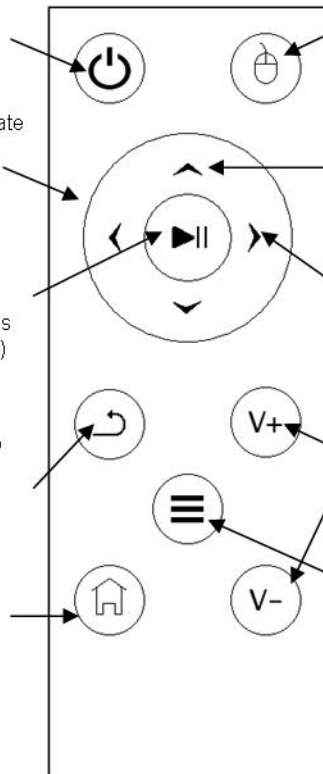

**POINTER** — Toggle a pointer ON/OFF to aid navigation

**UP/DOWN ARROW**— Press to skip forward or backward 10 Mins whilst playing ON DEMAND video.

**LEFT/RIGHT ARROW**— Use to skip backward or forward 30 secs during ON DEMAND video

**VOLUME**— Press to increase/decrease volume. Works in conjunction with TV remote

**MENU**— Press to access CONTEXT Menu for channels and media items or to access playback screen during a video or Live TV channel