

Clearstream MX Multiplay Guide Appendix

6. Introduction of MX Multiplay Remote Controller

POWER ó Power on/off the media unit

HOME ó Press to return to XBMC from any android app

UP/DOWN ARROW ó Press to skip forward or backward 10 Mins whilst playing ON DEMAND video.

LEFT/RIGHT ARROW ó Use to skip backward or forward 30 secs during ON DEMAND video

MENU ó Press to access CONTEXT Menu for channels and media items or to access playback screen during a video or Live TV channel

VOLUME ó Press to increase/decrease volume. Works in conjunction with TV remote

RETURN/STOP ó Press to go back ONE menu level. Also acts a STOP button to stop current video or Live TV Channel

NAVIGATION ó Use to navigate UP/DOWN LEFT & RIGHT within menus. Press PLAY/

PLAY/PAUSE/SELECT ó Press to play or pause an ON DEMAND Video Stream. (Does not work with live TV streams.) Also used to select choice.

POINTER ó Toggle a pointer ON/OFF to aid navigation

