

ZOOM— Use to change aspect ratio of picture


NAVIGATION— Use to navigate UP/DOWN LEFT & RIGHT within menus. Press OK to select choice.

PLAY/PAUSE— Press to play or pause an ON DEMAND Video Stream. (Does not work with live TV streams.)

STOP— Press to stop current live TV or on-demand video and return to menu

HOME— Press to return to start HOME screen

BACKSPACE— Press to delete character when typing a search

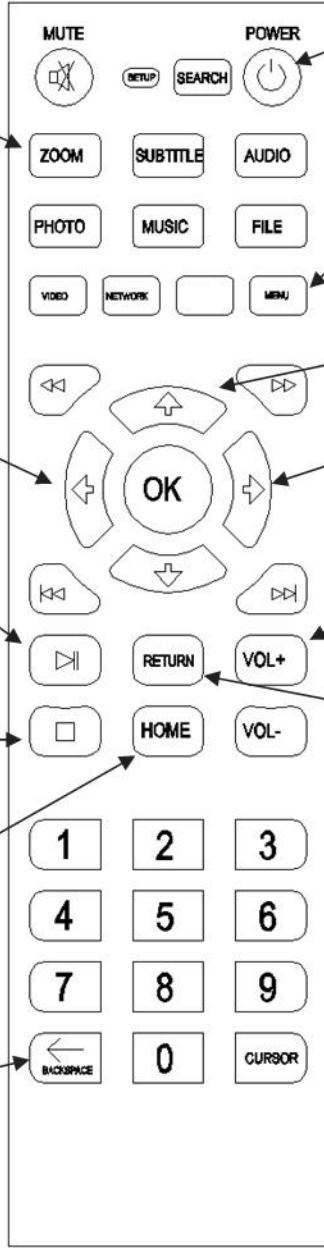

POWER— Power on/off to the media unit

MENU— Press to access CONTEXT Menu for channels and media items

UP ARROW— Press to skip forward 10 Mins whilst playing ON DEMAND video.

RIGHT ARROW— Use to skip forward 30 secs during ON DEMAND video

VOLUME— Press to increase/decrease volume. Works in conjunction with TV remote

RETURN— Press to go back ONE menu level.