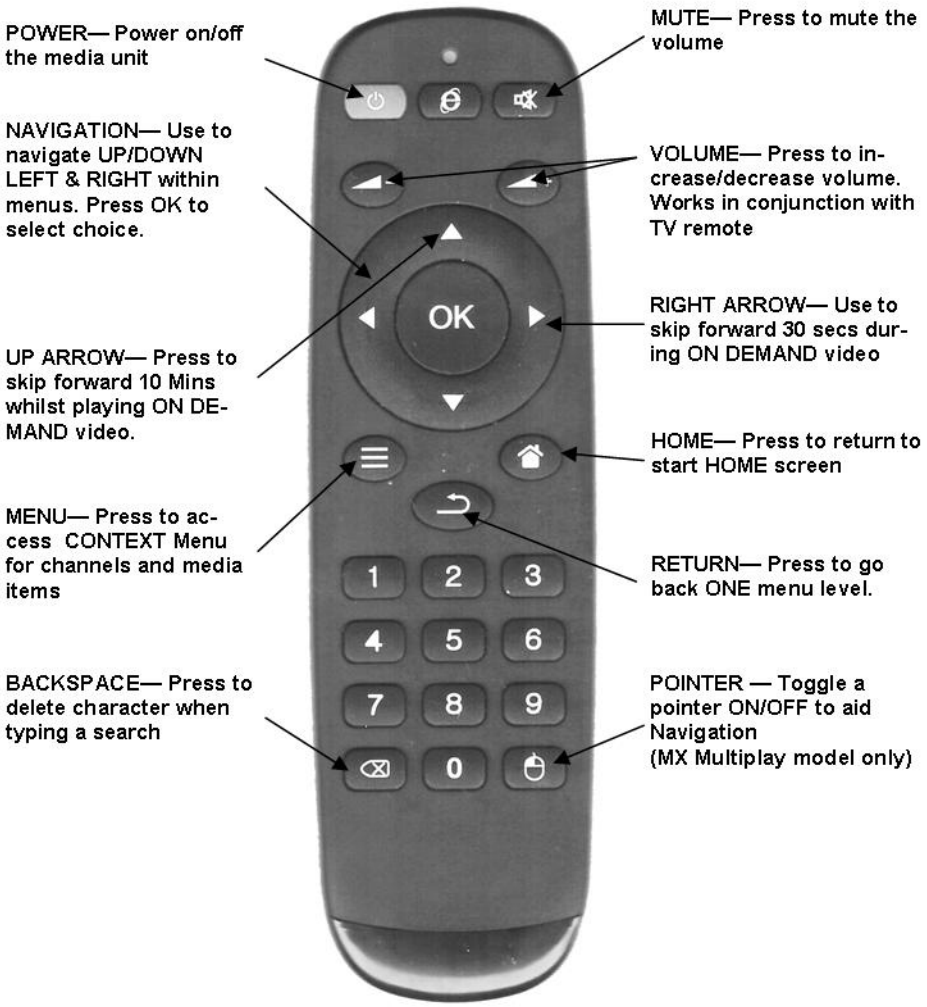
POWER— Power on/off the media unit
NAVIGATION— Use to navigate UP/DOWN LEFT & RIGHT within menus. Press OK to select choice.
UP ARROW— Press to skip forward 10 Mins whilst playing ON DEMAND video.
MENU— Press to access CONTEXT Menu for channels and media items
BACKSPACE— Press to delete character when typing a search
MUTE— Press to mute the volume
VOLUME— Press to increase/decrease volume. Works in conjunction with TV remote
RIGHT ARROW— Use to skip forward 30 secs during ON DEMAND video
HOME— Press to return to start HOME screen
RETURN— Press to go back ONE menu level.
POINTER — Toggle a pointer ON/OFF to aid Navigation (MX Multiplay model only)
OK
1
2
3
4
5
6
7
8
9
0